

QUICK GUIDE

LoRa Field strength meter

Basic function: Measures the LoRaWAN signal quality at the trap installation site. Every trap installation site should be measured!

1. Turn on

Slider to the right



2. Switch display

Press the small button on the front twice for the illustrated view



3. Positioning the measuring device

Measurement is only meaningful if it is placed or held at the exact location where a trap is to be positioned (under the switch cabinet, under the heating...).

4. Trigger measurement

Press the large button on the front, wait until the table is filled



5. Check result (measured value bottom center)

0 dBm	-50 dBm	-100 dBm	-120 dBm
Perfect	Good	Acceptable	<i>Not suitable</i>

Measured value worse than -100 dBm?

Move the trap by 30-50 cm or set up an additional gateway.

More information & instructions:
traplinked.com/manual



Technical help & support:
traplinked.com/support



+49 911 477 567 65
support@traplinked.com